


D77 Series QUICK SETUP GUIDE

ACCESSORIES LIST

- User Manual
- Quick Setup Guide
- Warranty Card
- Remote Control
- Battery x 2
- Screws for 32" (ST4 x L16) x 3
- Screws for 42" (M6 x L12) x 4

1 INSTALLING THE STAND


Carefully place your TV on a soft, cushioned, surface to prevent damage to the screen. Follow the illustrations below to complete the installation steps.

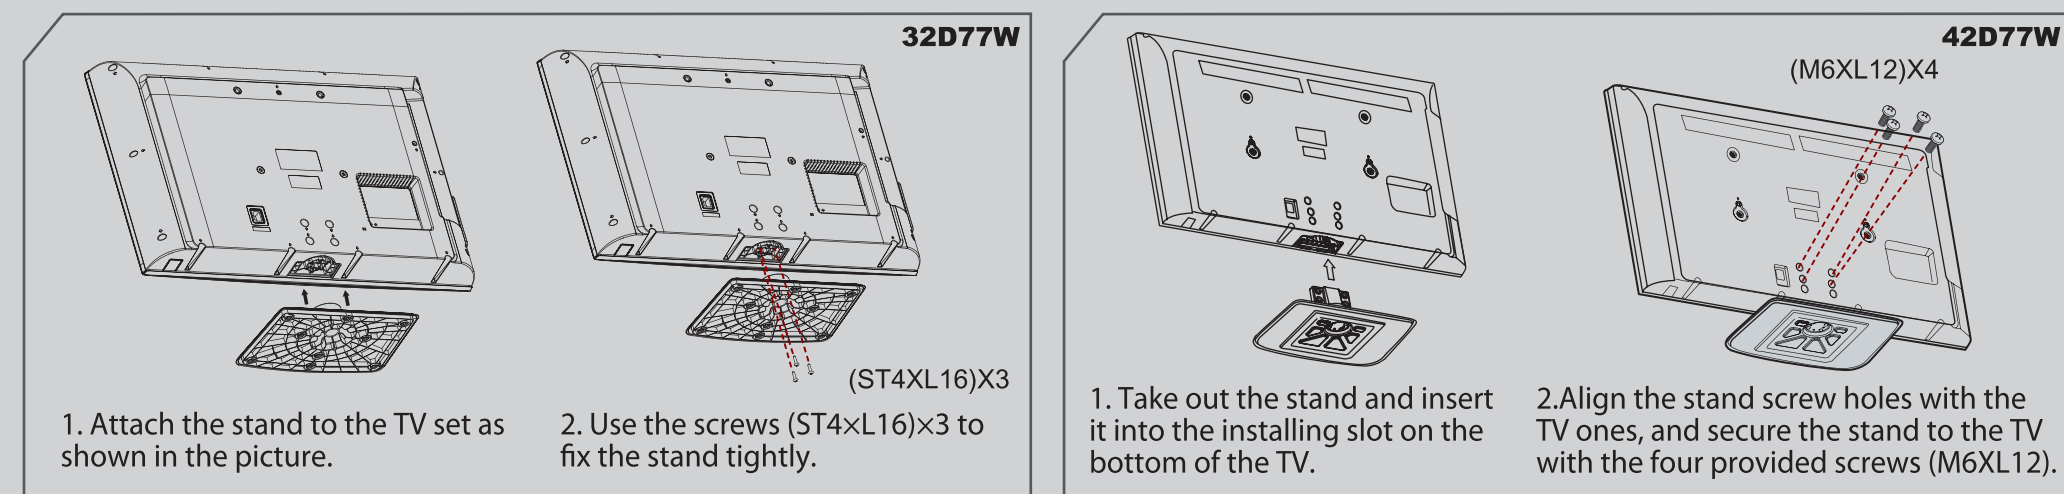


2 INSTALLING A WALL-MOUNT BRACKET

If you want to attach the TV to a Wall-Mount bracket (not provided), you should first remove the stand if it is pre-attached.

1. To avoid internal damaging TV because of the excessively long screws and causing the TV falling down for the screws not long enough, the spacers (12-13mm in length) and the screws (M6xL25) are recommended to use, and ensure that the selected screws are 6.5-7.5 mm in length when measured from the surface of the TV's rear cover.

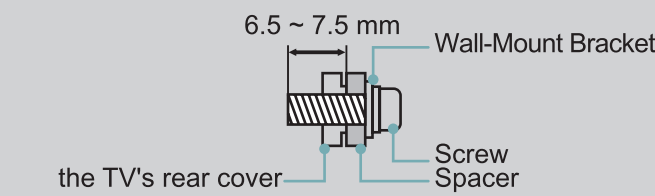


2. Follow instructions provided with the Wall-Mount bracket. If you are not sure of your ability to do complete the installation, contact a professional installer or service technician for assistance. The manufacturer is not responsible for any damages or injuries that occur due to mishandling or incorrect assembly.

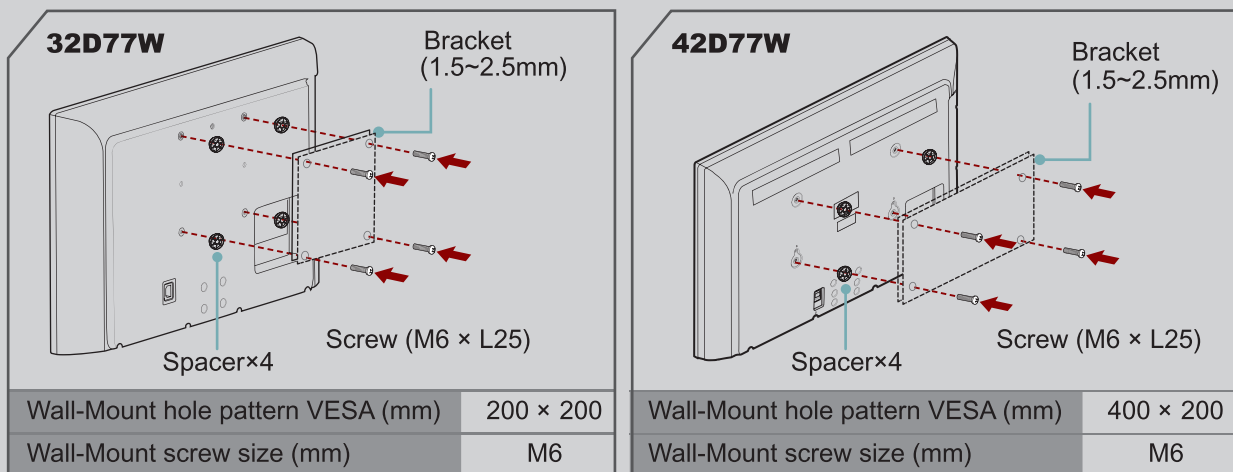


3 TV CONNECTORS

Check the jacks for position and type before making any connections. Loose connections can result in image or color problems. Make sure that all connections are tight and secure.

VGA & PC / DVI AUDIO

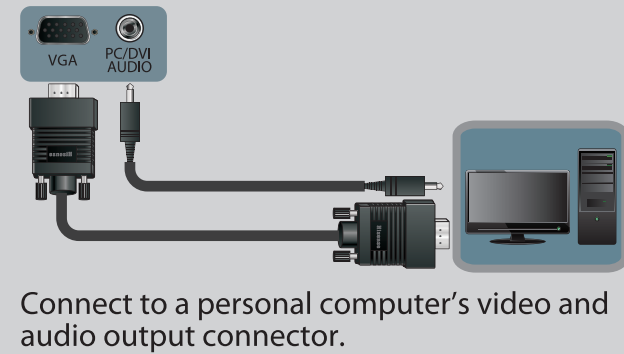

ANT/CABLE IN

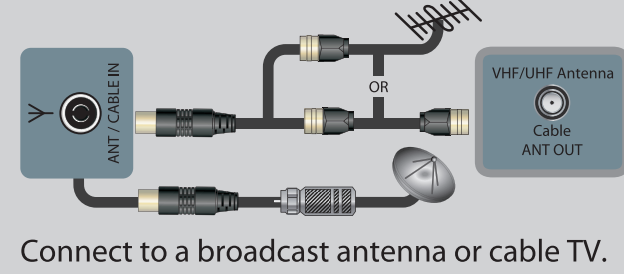

LAN




HEADPHONE



DIGITAL AUDIO OUT




BEST HDMI IN

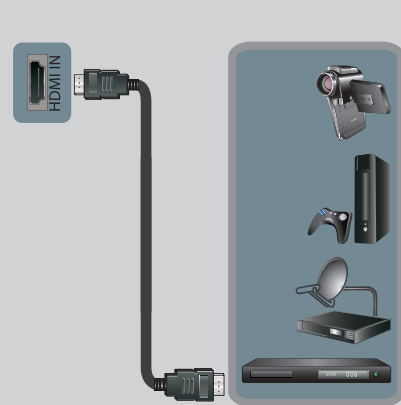


Available devices: DVD, Blu-ray player, Audio Video Receiver, cable box, satellite receiver, game station.

BETTER COMPONENT IN

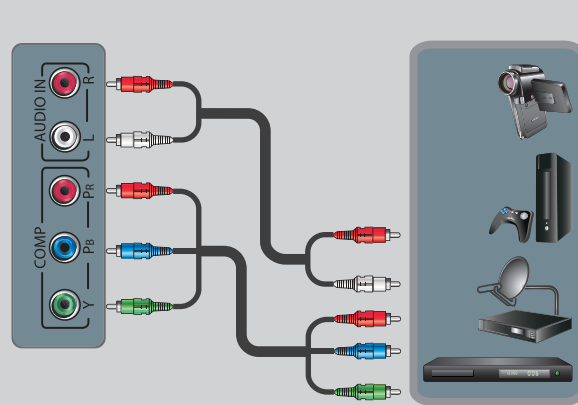

Available devices: DVD, Blu-ray player, Audio Video Receiver, cable box, satellite receiver, game station.

GOOD AV IN

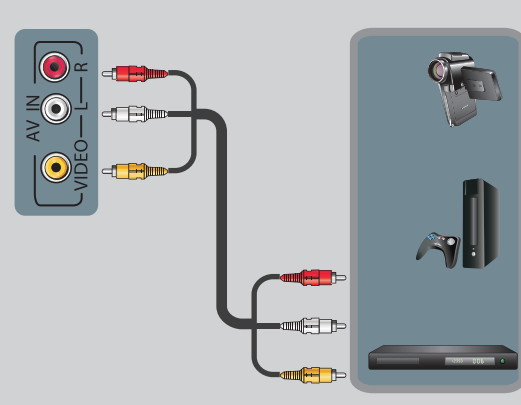

Connect the composite video and audio output jacks of your legacy A/V equipment, such as a VCR.

4 REMOTE CONTROL



Power: Turns the TV on or off.

Input: Select source to watch.

VUDU: Press to launch VUDU, the premium video service.


Hi-Smart: Press to browse the Services Apps in Hi-Smart Hub. The Apps in the Hi-Smart Hub let you watch movies, TV shows, listen to music, and much more.

NETFLIX: Press to launch NETFLIX instant video streaming.

NOTE:

1. Illustrations are for your reference only.
2. Red/Green/Yellow/Cyan buttons are used for Electronic Program Guide (EPG). After pressing the [GUIDE] button when viewing digital channels, the same color buttons will appear with explanations in the on-screen display (OSD). Follow the steps shown in the OSD.

INSTALLING BATTERIES

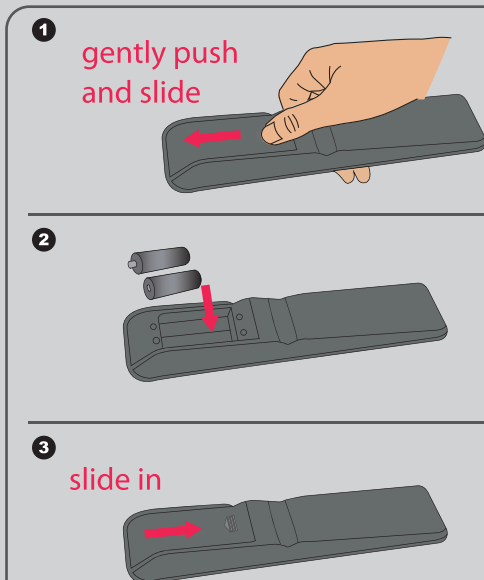


• Slide the back cover to open the battery compartment of the remote control.

• Insert two AAA size batteries. Make sure to match the "+" and "-" ends of the batteries with the "+" and "-" ends indicated in the battery compartment.

• Close the battery compartment cover.

5 CHOOSE YOUR PICTURE MODE

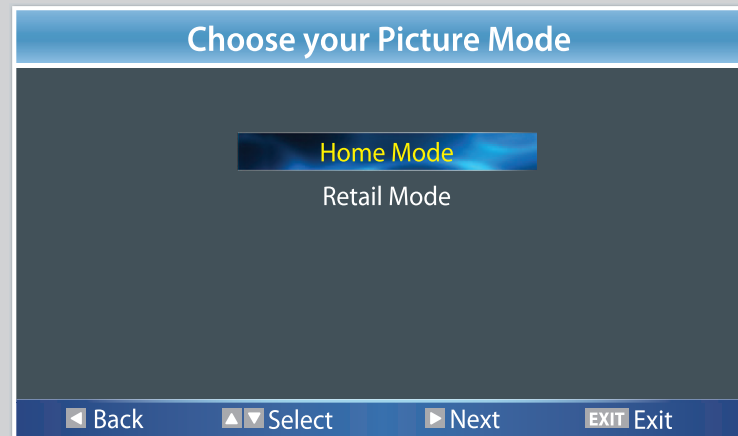

Press ▲ or ▼ to highlight Home mode or Retail mode, then press OK/ENTER. Retail mode is not an energy-saving mode. The Choose your Tuner Mode screen opens.

7 FEATURES



You will need high-speed Internet access (wired or wireless) such as cable or DSL to enjoy online content on your HDTV. Contact your cable or DSL provider if you need high-speed Internet access.




Hisense Smart TV brings movies, television shows, music, photos, social networking, internet browsing and, other multimedia applications into your living room with easy-to-use controls. An internet connection is required to activate Smart TV features. Some services may require a subscription.

Wireless Connection: Built-in Wi-Fi connector for seamless Internet connection.

DLNA: Computer, TV and other digital devices can be connected by an entertainment network and they can share each other. Users can use a TV to enjoy movies, pictures, music and other multimedia content with their family.

Note: The 32D77W does not have a FULL HD feature.

6 CHOOSE YOUR TUNER MODE

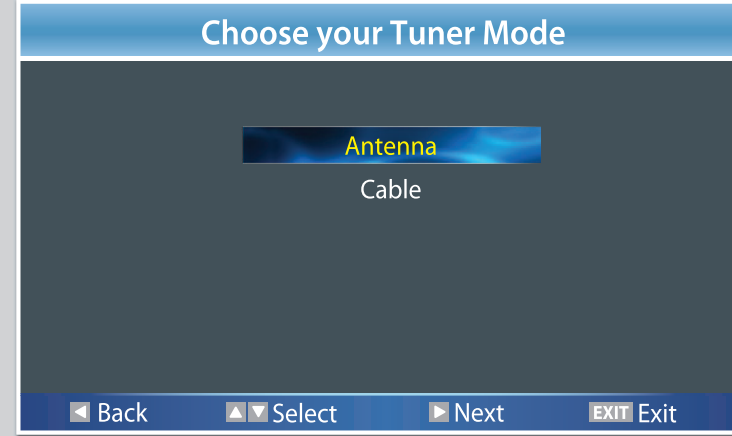

Press ▲ or ▼ to highlight Antenna or Cable. If you select Antenna or Cable, your TV scans for available channels. The scan may take several minutes.

Note: If you are using a cable or satellite box and you have connected it to the TV using a Coaxial cable, you should select the cable option. Be sure the cable or satellite box is turned on before starting the channel scan. If you use a cable or satellite box connected to A/V, Component or HDMI, you don't need to scan for channels.

8 HELP TOPICS

When there is something wrong with your TV, you can try turning off the TV and restarting it. You can also refer to the following chart for problem and solution tips. If the problem cannot be resolved, please contact Hisense for additional assistance.

SYMPTOMS	POSSIBLE SOLUTIONS
No sound or picture	<ul style="list-style-type: none">• Confirm LED light is either red or blue. If illuminated, power to the TV is OK.• Confirm power cord is plugged into the AC outlet and the AC outlet is getting electricity.• Attempt to power on unit using the power button on both the TV and the Remote.
Picture is normal, but no sound	<ul style="list-style-type: none">• Check the volume settings.• Check if Mute mode is set "on".
I have connected an external source to my TV and I get no picture and/or sound.	<ul style="list-style-type: none">• Check for the correct output connection on the external source and for the correct input connection on the TV.• Make sure you have made the correct selection for the input mode for the incoming signal.
Network connection fail.	<ul style="list-style-type: none">• Check network physical connection, make sure connection is correct.• Enter "Menu", "Settings", "Network", "Configuration", make sure configuration is correct according to your network service provider.• Enter "Menu", "Settings", "Network", "Configuration", "Connection Test" to make sure that network connection test is successful.
Connect VUDU/Netflix fail.	<ul style="list-style-type: none">• Check network connection is correct, both physically and configuration.• Enter "Menu", "Settings", "Network", "Configuration", "Connection Test" to make sure that network connection test is successful.• For Vudu: Enter "Menu", "Settings", "Network", "Configuration", "Applications", "VUDU", "Deactivation" to reset c account.• For Netflix: Enter "Menu", "Settings", "Network", "Configuration", "Applications", "Netflix", "Deactivation" to reset Netflix account.
DLNA does not work.	<ul style="list-style-type: none">• Check network connection is correct, both physically and configuration.• Make sure DLNA server (PC or Mac) has shared media content and TV has permission to access shared media.• Enter "Menu", "Settings", "Network", "Configuration", turn on "DLNA".• Select Hi-DMP source to find shared contents. Select "Hi-DMP" source by using [INPUT] button on remote or press [Hi-Smart] button and then select "MultiMedia" icon.
How do I get easy IPTV to work on my TV?	<ul style="list-style-type: none">• You need a broadband (high speed) Internet service with a speed of no less than 1.5 Mbps.• Connect the TV to the internet through your router by an Ethernet Cable or wireless. If connection fails, check with your internet service provider or router manufacturer to determine if there is a firewall, content filter, or proxy settings that may block the TV from accessing the internet.• Before calling for service, check the following information for possible solutions to problems you may experience. If none of these solutions work, turn off the TV, then turn it on again.• Caution: Do not try to repair the TV yourself. Refer all servicing to qualified repair personnel.